PRE-USE MAINTENANCE:

<u>RIGGING:</u>
Inspect turnbuckles tighten as required, pinned as required.
2Inspect clevis pins and cotter pins.
3Visually inspect spreader tips and other areas where sails may chafe during sailing, replace tape as necessary.
4Halyards free and not tangled.
5Inspect mast hardware attachment bolts, tighten as required.
HULL AND DECK INSPECTION:
1 Pedestal steering OK, rudderpost packing gland not weeping.
2Bilge and compartments are dry.
3Through hull valves, hoses, and clamps OK.
4Check running lights.
ENGINE:
1Check engine oil and fuel levels.
2Shaft seal OK, cooling water intake valve opens and closes OK.
3Throttle and shift OK.
MONTHLY MAINTENANCE:
RIGGING:
1Inspect chain plates, fastenings and bolts for leaks, replace sealant and tighten as necessary. (1)
2Inspect blocks, shackles, cotter pins.
3Check rigging tune, rigging wire condition.
4Check turnbuckles and locking pins.

<u>NOTE</u> (1): It may be necessary to rebed the chainplates after the boat has been sailed the first few time as some movement between the deck and the metal chainplate may break the bedding material seal. This movement is normal. Chainplates should be rebedded or caulked at the first sign of a leak to avoid damage to the interior wood and finishes.

HULL AND DECK: