

HULL AND DECK:

1. _____ Inspect hull valves open and close freely.
2. _____ Winches turn freely, lubricate as per manufacturer's recommendations.
3. _____ Clean and wax gel coat surfaces as necessary.

ENGINE:

1. _____ Check oil and fluid levels, visually check for fluid leaks.
2. _____ Battery: Check fluid levels and tie downs.
3. _____ Tighten all bolts and nuts to proper torque.
4. _____ Check fuel tank fittings and hose clamps.
5. _____ Disassemble and inspect cooling system anti-siphon
6. _____ Check bolts.
7. _____ Check filters.