

SEASONAL MAINTENANCE:

RIGGING:

1. _____ Mast head pins and sheaves turn freely.
2. _____ Halyards and shackles are in good condition. (Refer to Rigging, Stepping the Mast)
3. _____ Spreader tips and bases, and mast fittings OK.
4. _____ All shroud terminations and swaged fittings OK, check for cracks or corrosion.
5. _____ Gooseneck assembly and boom assembly OK.
6. _____ Mast, boom and spreaders cleaned and waxed.
7. _____ Lifelines, pelican hooks, and stanchions all OK, all pins and fittings are secure, cotter rings taped. Turnbuckles, pelican hooks and connector loops OK, screw fittings checked for thread wear.

HULL, DECK and CABIN:

1. _____ All chainplates and through bolts tight.
2. _____ Disassemble winches and lubricate bearings and pawls.
3. _____ Inspect and coat electrical system connections, battery tie downs and terminal connectors to prevent corrosion.
4. _____ Drain and flush fresh water system.
5. _____ Check head and anti-siphon valve in toilet.
6. _____ Hatch gaskets and hold down fasteners OK.
7. _____ Bottom, keel and rudder condition of anti-fouling paint OK.
8. _____ Lifelines, stanchions and pelican hooks OK.

ENGINE:

1. _____ Check shaft alignment.
2. _____ Clean motor thoroughly.
3. _____ Inspect fuel system.
4. _____ Tune engine as per manufacturer's recommendations.
5. _____ Exhaust system check for leaks, or deterioration, insulation in place.