

The above recommendations conform to section 10.8 in the A119.2 code covering electrical, plumbing, and heating of a recreational vehicle. The solution is approved and recommended by competent health officials.

#### **MANUAL BILGE PUMP:**

The manual bilge pump is located in the cockpit. Insert the handle through the water tight fitting in the cockpit to operate the pump. The pump intake hose is in the keel stub under the main cabin sole. There is a screen on the bilge pump pick-up. This screen should be periodically checked and cleared of debris.

#### **SEACOCKS:**

All underwater through hull fittings are equipped with seacock ¼ turn valves. It is good practice to close all seacock valves when leaving the boat, especially for long periods of time.

To close seacock valves, turn handle perpendicular to flow. To open, turn handle ¼ turn to parallel.

It is good practice to operate the seacock valves at least once a month to keep the seals lubricated. Refer to the through hull and seacock maintenance guide supplied by the manufacturer enclosed in this manual.